



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX T58840. You'll find the answers to all your questions on the AEG-ELECTROLUX T58840 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX T58840

User guide AEG-ELECTROLUX T58840

Operating instructions AEG-ELECTROLUX T58840

Instructions for use AEG-ELECTROLUX T58840

Instruction manual AEG-ELECTROLUX T58840

LAVATHERM 58840

User manual

Condenser Dryer



[Your user manual](#)

[AEG-ELECTROLUX T58840](#)

Manual abstract:

· Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. · Always unplug the appliance after use, cleaning and maintenance. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. 6 Important safety information · Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. · Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like).

As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water.

· Risk of fire: items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer. · If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer. · Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance WARNING! Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Risk of fire! · Risk of electric shock! Do not spray down the appliance with jets of water. Installation · This appliance is heavy.

Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. ·

All packaging must be removed before use. Serious damage can occur to the product and to property if this is not adhered to.

See relevant section in the user manual. · The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. · Care must be taken to ensure that the appliance does not stand on the electrical supply cable. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. Important safety information 7 · After having installed the appliance, check that it is not pressing or standing on its electrical supply cable. · If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory). Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash fabrics which are designed to be machine dried.

Follow the instructions on each garment label. · Do not dry unwashed items in the tumble dryer. · Do not overload the appliance. See the relevant section in the user manual. · Clothes which are dripping wet should not be placed in the dryer. · Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible. · Fabric softeners, or similar products should be used as specified by the fabric softener instructions.

· Caution - hot surface : Do not touch the door light cover surface when the light is switched on..



[Your user manual](#)
[AEG-ELECTROLUX T58840](#)